 


FRONT Z-FOLD

Cuisinart DIGITAL FORK THERMOMETER

USER MANUAL

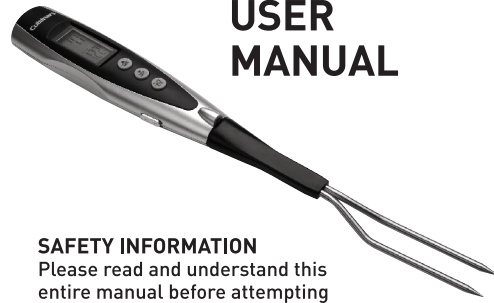

SAFETY INFORMATION

 
Please read and understand this entire manual before attempting to assemble, operate or install the product. If you have any questions regarding the product, please call customer service at 1-866-994-6390.

FEATURES:

Backlit Digital LCD
Dual Temp Display:
Current and Set Temp
Count Down/Up Timer
Built-in LED Light
°C/°F Temp Settings
Stainless Steel
Meat Probes


CONTROLS:

MIN/TEMP UP
SEC/TEMP DOWN
°C/°F & S/S (START/STOP)
LED Light ON/OFF
TIMER/THERMO

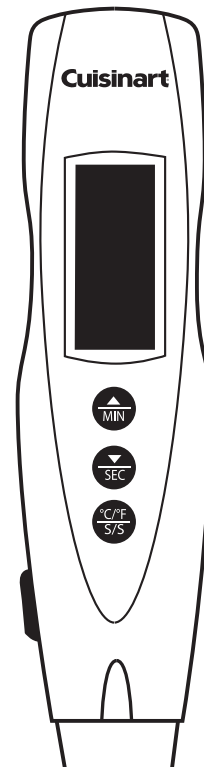

BATTERY INSTALLATION:

 
1. Locate the battery cover on the back of the fork handle.
2. Remove the battery cover by releasing tab at the bottom of compartment cover.
3. Insert or replace 2 "AAA" 1.5V batteries as indicated by the polarity symbols (+ or -).
4. Replace the battery cover.

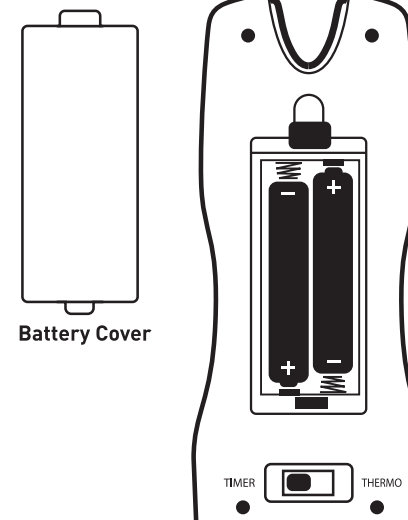

OPERATING INSTRUCTIONS:

THERMOMETER

 
1. Locate the switch on the back of the fork handle and move to "THERMO" position.
2. Press any button to turn ON backlit digital LCD.
3. Press the °C/°F button to select Celsius or Fahrenheit temperature readings.
4. Press the "UP" or "DOWN" arrow to set target temperature to desired doneness. Refer to the Doneness Chart (Fig. 1) for typical doneness temperature levels.
5. Once meat has been cooking for a while, insert the fork probe tips into the thickest part of the meat to obtain a temperature reading. Avoid touching bone or heavy fat areas. Wait a few seconds and view the meat temperature.
6. Repeat temperature readings periodically until target temp is reached. Make sure probe tips do not protrude through the meat for accurate temperature readings.
7. Alarm sounds when the target temp is reached.
8. Automatic shut off.

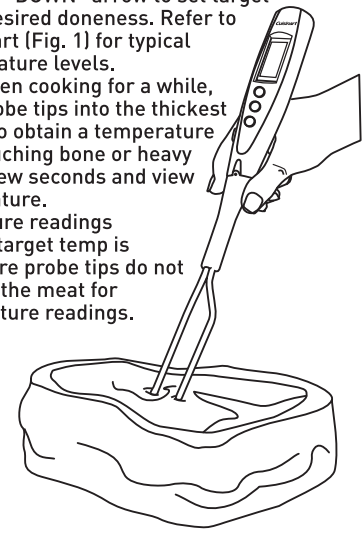

TIMER


1. Locate the switch on back of the fork handle and move to "TIMER" position.
2. To set a count-down time press the "MIN" and/or "SEC" button(s).
3. Press the "S/S" (START/STOP) button to begin count-down.
4. If no count-down time is set, press the "S/S" to count-up.
5. To clear the timer, press the "S/S" button to pause count-down or count-up.
6. Once paused, press both the "MIN" and "SEC" buttons at the same time to reset to zero.
7. Once a countdown has finished, the unit will beep.
8. To silence the alert press the "S/S" button again or move the switch on the back of the fork handle to the "THERMO" position.

 NOTE: The timer will count up or down from 99:59.

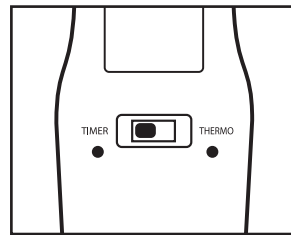

LED LIGHT

 1. Locate the ON/OFF switch on the side of the fork.
2. Slide down to turn light ON and slide up to turn light OFF.

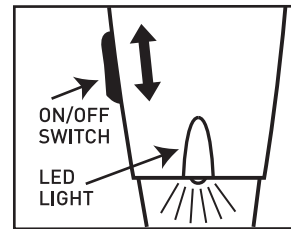

FOOD	TASTE	F°/C°
BEEF	WELL	170°F / 77°C
	M WELL	165°F / 74°C
	MED	160°F / 71°C
	M RARE	150°F / 66°C
RARE	145°F / 63°C	
LAMB	WELL	170°F / 77°C
	M WELL	165°F / 74°C
	MED	160°F / 71°C
	M RARE	145°F / 63°C
VEAL	WELL	165°F / 74°C
	M WELL	160°F / 71°C
	MED	150°F / 66°C
	M RARE	145°F / 63°C
PORK	WELL	170°F / 77°C
	M WELL	165°F / 74°C
	MED	160°F / 71°C
TURKEY	WELL	165°F / 74°C
CHICKEN	WELL	165°F / 74°C
BURGER	WELL	160°F / 71°C
FISH	WELL	145°F / 63°C

Doneness Chart (Fig. 1)

CARE INSTRUCTIONS:

1. Hand wash stainless steel fork probes ONLY using mild soap and hot water.
2. Rinse thoroughly.
3. Dry completely with soft cloth.
4. Not dishwasher safe.
5. DO NOT splash or submerge LCD in water.

CAUTION:

Never submerge Digital Fork Thermometer in water or rain. Not waterproof. Never leave Digital Fork Thermometer in meat continuously while cooking. DO NOT expose Digital Fork Thermometer to direct heat or flames.

WARNING:

DO NOT mix old and new batteries. DO NOT mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries. DO NOT dispose of batteries in fire. Batteries may explode or leak. Please dispose of batteries properly. Remove batteries for long term storage. Batteries could leak causing corrosion.

Cuisinart

For troubleshooting, FAQs or Customer Service, please visit us at www.cuisinartgrilling.com, email us at grilling@thefulhamgroup.com, or contact us at 1-866-994-6390.

©2015 Cuisinart
Cuisinart® is a registered trademark under license to The Fulham Group. Distributed by The Fulham Group, Newton, MA. 02466 U.S.A. MADE IN CHINA. One Year Limited Warranty Not dishwasher safe. Hand wash only. www.cuisinartgrilling.com

BACK Z-FOLD